
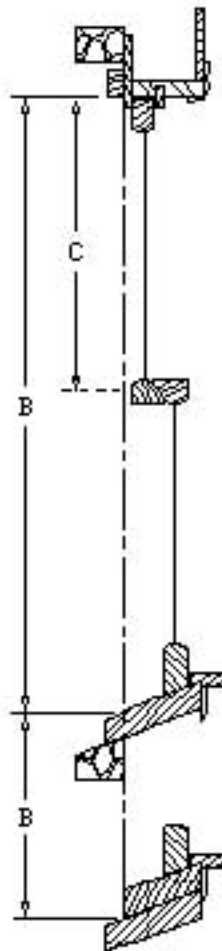
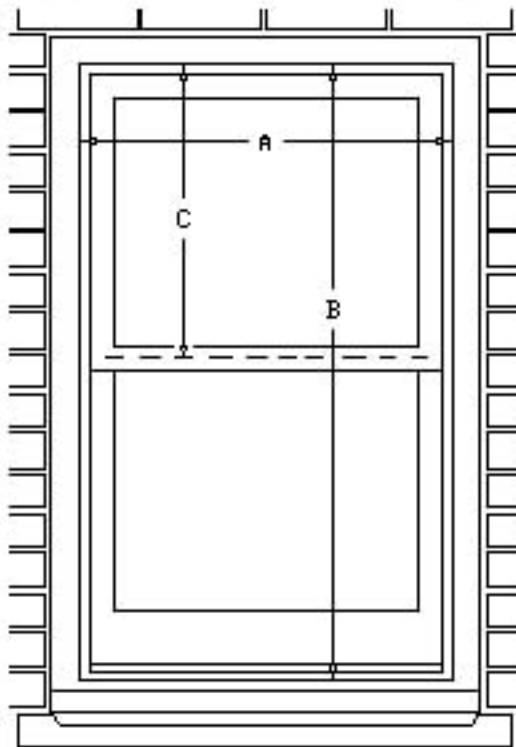


How to measure for storm windows on a wood double hung.

Blindstop installation: Measure "A" inside opening between brickmold (trim). Storm window mounts **on top** of blind stop. Allow for clearance of brick mold (trim) on "tip-to-tip (TTT)" sizing of windows.

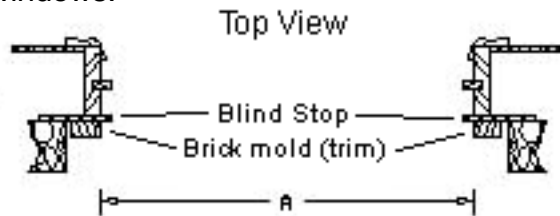

"C" is from top to the centerline of the meeting rail. "C" is only measured when double hung is an oriel or cottage type. (unequal glass size.)

Standard Sill

Measure to the top of sill

Drop Sill

Measure past sill. Request 1 1/2" sill expander.

Overlap installation: Measure "A" inside opening. Add 1" to the "A" dimension for a 1/2" overlap on each side. Add 1/2" to "B" for overlap at the head. If the sill is a standard sloped sill that projects beyond the side trim then specify standard 1" expander. If the sill does not project beyond the side trim boards then add 1/2" for sill overlap and specify "NO" expander.

Note: We manufacture "tip to tip" sizing - tip of installation flange to tip of installation flange
 "Tip to tip" sizing means that the factory makes no adjustments or deductions to size

Kaufmann Window & Door Corporation
 12891 Mt. Elliott • Detroit, MI 48212 • 313 893 9500

The mark  of Quality